→1、中继器接通电源:

中继器是通过USB供电的,插在电脑上 或者使用USB充电头进行供电。



快速配置说明

WiFi中继器

→2、安卓手机终端,可通过碰触NFC 或系统扫码功能,快速跳转到中继器 设置界面。苹果手机用户,请使用手 机相机扫描二维码,点击识别到的链 接, 跳转到中继器设置界面;

注意:设置完成后,因中继器的\ 名称和密码发生改变,不能再使用以 上快速连接操作。



→ 3、配置WiFi中继:

动弹出弹出设置页面,在弹出的页面选 行操作,即可完成WiFi信号中继放大;



通过无线连接进行设置时, WiFi中继 器的红灯常亮表示未设置状态;当完

登录WiFi-RePeater

connect.rom.miui.com

置成AP模式后,可通过网口把有线网 络转换成无线网络

终端登录中继器的管理页面后,点击 页面左下角的"AP设置", 切换到AP模 式设置页面:

高性能Wi-Fi扩展器	
Language/语言: 选择/Choice ~	
选择要连接的接入点	
⇒ JDyangche 🔒	选择
debug_2.4G	选择
Ş SmartBox-7CDD ■	选择
RLZX-5G-CPE	选择
PIRECT-a7-HP 1005 Laser	选择

2、设置好WiFi名称和WiFi密码后提 交即可完成AP设置

登录WiFi-RePe 192.168.11.1	eater	:		
高性能Wi-Fi扩展	- EE		代理信息	
配置成功!			用户信息	
扩展后的网络名:	WiFi-RePeater			
加密模式:	WPA2PSK		维修日期	L
扩展后的密码:	"12345678"			ſ
				ī

、设置完成后,把上级路由器的网线 接入到中继器侧面的网口,就可以把有 线网络转换成无线网络。

你的扩展网络已经可以使用,现在请告试连接,



(为了维护您的权益,请您认真填写,并妥善保管,送修时请出示此存根) 产品型号 序列号 代理信息 联系电话 销售日期 -----用户姓名 通讯地址 用户信息 E-mail

# 维修记录表

THE LIPS AND ADMINISTRA				
维修编号	<b>推修编号</b> 维修记录		修编号 维修记录 维修员签字	



维修编号	维修记录	维修员签字	

Instructions

WiFi Range Extender

Quick configuration

→ 1. WiFi Repeater power on: plug on the computer or use USB charger for power supply.



→ 2、On an Android phone, you can quickly jump to the repeater setting interface by touching the NFC or no longer be used due to the change of the WiFi name and password of the



above quick connection operation can then operate according to the wizard to complete WiFi signal relay



When WiFi Repeaters is not set state alternating red light will always light up on a red light; If the connection signal is weak, the blue light will always light

AP mode:

Sign in to WiFi-RePeater

Wi-Fi Socket Range Extender

Language/语言: 选择/Choice >

Choose your network

BTGW

JDyangche

debug\_2.4G

1. WiFi repeater supports AP mode. After the repeater is set to AP mode, the wired network can be converted to wireless network through the network port:

Select

Select

Select

Select

DIRECT-a7-HP 1005 Laser Select

i Socket Range Extender		
age/BB: (BB/Choice v		
e your network 🕨		
Hobite WIFI	Select	
lebug_2.45	<b>≙</b> Select	
DinaNet-3kJ3	€ Select	
LZX-50-CPE	<b>⊆</b> Select	
MERCURY_SFED	■ Select	
ChinaNet-SteniT	Select	
ykşt	<b>△</b> Select	
ChinaNet-uiXc	€ Select	
108	€ Select	

. When the setting is complete, the network cable of the upper router is connected to the network port on the side of the repeater, you can convert the wired network into a wireless

Your Wi-Fi extended network is now ready to use. Try connecting to your extended network now.

Socket Password: "12345678"

2. After setting the WiFi name and



# Guarantee

WiFi password, submit it to complete	Guarantee	
the AP setting:	User Files	
Sign in to WiFi-RePeater 192.168.11.1	User Name	
	Address	
Wi-Fi Socket Range Extender	Telephone	
Configuration Successful!	Purchase Site	
Socket SSID: WIF-RePeater	Purchase Price	
	Commodity And	
Encryption Mode: WPA2PSK	Specitications	
Sorket Passwort "12345678"	Dealers Signature	

