

1200M 无线网卡+蓝牙功能产品

安装指南



注：以windows7安装为例，其他系统安装可参考安装步骤

A. 网卡驱动安装步骤：

1.将光盘放入电脑的光驱，打开驱动光盘（或者从官网“www.edup.cn”技术支持—下载中心—下载驱动），打开驱动文件，找到应用程序Setup.exe，双击开始运行。

IsConfig.ini

Setup.exe

setup.ico

2.正在准备进行软件安装过程：

Wireless LAN Driver - InstallShield Wizard

Wireless LAN Driver 安装程序正在准备 InstallShield Wizard，它指引您完成驱动程序的安装过程。请稍候。

正在准备安装...

3.安装状态显示界面：

REALTEK USB Wireless LAN Driver

安装状态

InstallShield Wizard 正在安装 REALTEK USB Wireless LAN Driver

正在自动安装

REALTEK USB Wireless LAN Driver

安装状态

InstallShield Wizard 正在安装 REALTEK USB Wireless LAN Driver

正在安装 REALTEK USB Wireless LAN Utility

4.驱动安装完成显示界面：

REALTEK USB Wireless LAN Software

InstallShield Wizard 完成

InstallShield Wizard 已成功安装 REALTEK USB Wireless LAN Software。单击“完成”以结束安装。

完成

B. 蓝牙驱动安装步骤：

1.从官网“www.edup.cn”技术支持—下载中心—下载驱动，打开驱动文件，找到应用程序Setup.exe，双击开始运行。

2.正在准备安装驱动过程：

layout.bin

setup.exe

setup.ini

REALTEK Bluetooth Driver - InstallShield Wizard

准备安装

InstallShield Wizard 准备安装驱动程序，请稍候。

请稍候

3.点击“下一步”，开始安装软件。

REALTEK Bluetooth Driver

REALTEK Bluetooth Driver

InstallShield Wizard 正在安装 REALTEK Bluetooth Driver。请稍候。

下一步

4.安装过程显示界面：

正在安装 REALTEK Bluetooth

5.驱动软件安装完成后，请点击“否，稍后再重新启动计算机”，再点击“完成”。

REALTEK Bluetooth Driver

InstallShield Wizard 完成

InstallShield Wizard 已成功安装 REALTEK Bluetooth Driver。单击“完成”以结束安装。

单击：立即重新启动计算机

否，稍后再重新启动计算机

完成

正反两面

尺寸：长*宽=78mm x 70mm

1200M Wireless Adapter with Bluetooth Function

Quick Installation Guide



Note: Driver installed in Windows 7, other systems can refer to Windows 7

A: WiFi adapter driver installation steps:

1. Please insert the disc into your CD-ROM driver, locate and double click Setup.exe in the folder (If your computer does not have the CD-ROM Driver, please download the driver from EDUP official website: "www.szedup.com", find out "Support", click "Driver Download")

IsConfig

Setup

setup

setup.js

2. Software installation is in preparation:

Wireless LAN Driver - InstallShield Wizard

Wireless LAN Driver Setup is preparing the InstallShield Wizard, which will guide you through the program setup process. Please wait.

Preparing to Install...

3. Setup Status:

REALTEK USB Wireless LAN Driver

Setup Status

The InstallShield Wizard is installing REALTEK USB Wireless LAN Driver

C:_REALTEK\REALTEK USB Wireless LAN Driver\Wireless LAN

正在安装

REALTEK USB Wireless LAN Driver

Setup Status

The InstallShield Wizard is installing REALTEK USB Wireless LAN Driver

正在安装 REALTEK USB Wireless LAN Utility

4. Complete software installation:

REALTEK USB Wireless LAN Software

InstallShield Wizard Complete

The InstallShield Wizard has successfully installed REALTEK USB Wireless LAN Software. Click Finish to exit the wizard.

完成

B: Bluetooth driver installation steps:

1. Visit EDUP official website "www.szedup.com", find out "Support", click "Driver Download", download the driver you need. Locate and double click Setup.exe in the folder.

2. Software installation is in preparation :

Name

Bluetooth

Windows

layout.bin

setup

setup

REALTEK Bluetooth Driver - InstallShield Wizard

Preparing Setup

Please wait while the InstallShield Wizard prepares the setup.

REALTEK Bluetooth Driver Setup is preparing the InstallShield Wizard, which will guide you through the rest of the setup process. Please wait.

正在安装

3. Click "NEXT", Start the installer :

REALTEK Bluetooth Driver

REALTEK Bluetooth Driver

The InstallShield Wizard will install REALTEK Bluetooth Driver on your computer. To continue, click Next.

下一步

4. Software installation procedure :

正在安装 REALTEK Bluetooth

5. Choose "No, I will restart my computer later", then click "Finish".

REALTEK Bluetooth Driver

InstallShield Wizard Complete

The InstallShield Wizard has successfully installed REALTEK Bluetooth Driver. Before you can use the program, you must restart your computer.

是，我要立即重新启动我的计算机

否，稍后再重新启动我的计算机

完成